
[EN] User Manual for Power Tool Battery

Model: DCB200 / Rechargeable Lithium-Ion Battery
Please read these instructions carefully before using the battery!

CAUTIONS BEFORE USE

1. Keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small objects, that can make a connection from one terminal to another. (A short circuit between the battery terminals can cause burns or a fire.)
2. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts the eyes, immediately seek medical help. (Liquid ejected from the battery may cause irritation or burns).
3. Do not open the battery, as there is a risk of short-circuiting.
4. Protect the battery from heat, direct sunlight, and fire. There is a risk of explosion.

Operating environment conditions	Operating temperature: min. -20°C, max. 80°C
	Relative humidity: 5 - 95%
	Absolute humidity: 0,26 - 25 g/m ³
	Air pressure: 76 - 106 kPa
Storage conditions	Temperature: min. -40°C, max. 95°C
	Relative humidity: < 75%
	Air pressure: 86 - 106 kPa

Install the battery:

1. Insert the battery into the power tool handle so that it can be felt to engage and faces flush against the handle.
2. Avoid unintentional switching on. Ensure the ON/OFF switch is in the off position before inserting battery pack. (Carrying the power tool with your finger on the ON/OFF switch or inserting the battery pack into power tools that have the switch on invites accidents.)

Battery charging:

1. A new battery or a battery that has not been used for a longer time produces full power only after approximately five charge/discharge cycles.
2. A significantly reduced working time after charging indicates that the battery is used off and must be replaced.

Unilux Item No. DE77-1076 / 2.0Ah 18V 36W

Unilux Item No. DE77-1077 / 5.0Ah 18V 90W
